



ARCHISPOT

UP/DOWN

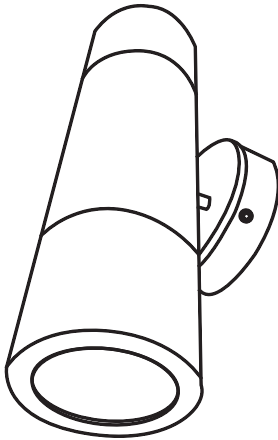


FIXED

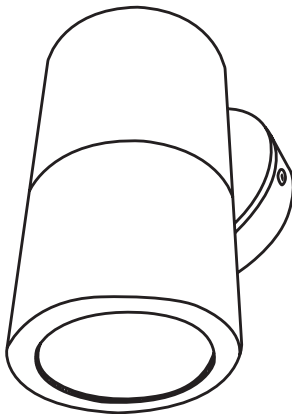

ADJUSTABLE

* Please ensure to install facing downwards only

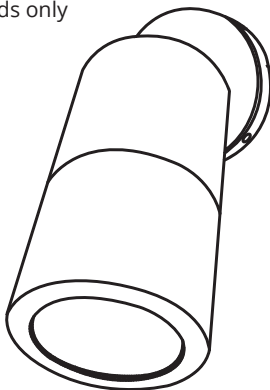

Product Specifications

Style	Watt	Max Lumen	lm/W	CCT	Colour Options
Adjustable	6W	421lm	70lm/W	3000/4000/6500k	Silver/Black/White
Fixed	6W	421lm	70lm/W	3000/4000/6500k	Silver/Black/White
Up/Down	12W	842lm	70lm/W	3000/4000/6500k	Silver/Black/White

Installation Instructions

1. Ensure power to the circuit you are working on has been switched OFF.
2. Using the Allen key supplied, remove the mounting base from light fitting.
3. Feed the mains supply wiring through the cable entry gland.
4. Ensure the cable entry gland and the rubber mounting gasket are in place before screwing the mounting base to the wall to maintain the integrity of the IP rating.
5. Re-connect the Earth wire at the terminal block.
6. Connect the mains supply wiring to the terminal blocks.
7. Application of silicon sealant is recommended around the 2 mounting holes and cable entry point to maintain the integrity of the IP rating.
8. Secure the light fitting to the mounting base using the Allen key provided.
9. Ensure everything is tightened and secured before switching the circuit power ON.

Product Codes:	AS-FIX-TRI-B	Black
	AS-FIX-TRI-S	Silver
	AS-FIX-TRI-W	White
	AS-ADJ-TRI-B	Black
	AS-ADJ-TRI-S	Silver
	AS-ADJ-TRI-W	White
	AS-U/D-TRI-B	Black
	AS-U/D-TRI-S	Silver
	AS-U/D-TRI-W	White

WARNING

The LED wall light must be installed by professional electrician.
 Switch power off when wiring the LED wall light.
 Ensure product is installed in a well ventilated area.
 Ensure input voltage conforms to the voltage range of product.
 Ensure wires are securely connected.
 Before switching on, ensure that all the wiring is correct.
 The warranty is void if product is not installed according to the instructions.