

HANECO LED BATTEN INSTALLATION GUIDE

BLADE^{G2} LED BATTEN


Thanks for choosing our BLADE G2 batten series products.
We strongly recommend that you read this manual carefully before installation.

⚠ WARNING


The light source of this luminaire is not replaceable. When the light source reaches its end of life, the whole luminaire shall be replaced. The luminaire must be installed by a professional electrician. Non-user clearing and maintenance parts. Switch power off when wiring the luminaire. Ensure input voltage conforms to the voltage range of product. Ensure wires are securely connected. Before switching on, ensure that all the wiring is correct. The warranty is void if product is not installed according to the instructions.

MODEL	POWER	VOLTAGE	FREQUENCY	DIMENSIONS
BLADE06-TRI	20W	AC 220-240v	50/60Hz	620 x 100 x 30mm
BLADE12-TRI	40W	AC 220-240v	50/60Hz	1215 x 100 x 30mm

Installation Instructions

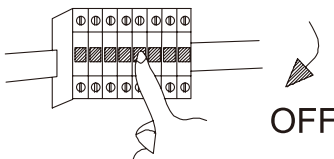


1. Switch off power.
Isolate the electrical supply near location so as not to cause electrical hazard.

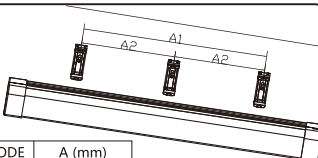


PRODUCT CODE	A (mm)
BLADE G2 600mm	A1: 400±20
BLADE G2 1200mm	A2: 500±20


2. Mark position of brackets.
*If using suspension kit (PSSKIT-1m/2m not included with fitting) go to step 5.

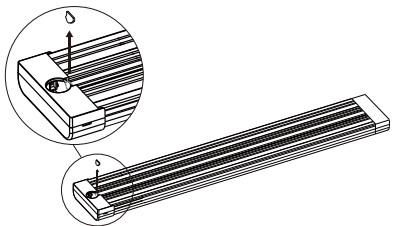


3. Wiring from the side of the fitting.

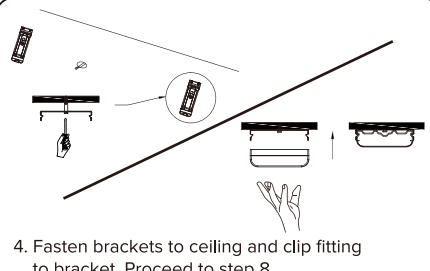


4. Fasten brackets to ceiling and clip fitting to bracket. Proceed to step 8.

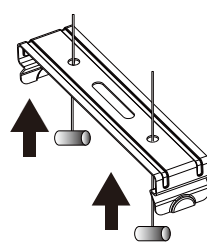


5. Insert wire through holes.

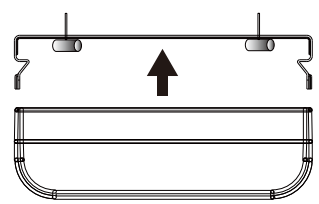


6. Clip fitting to brackets as shown.

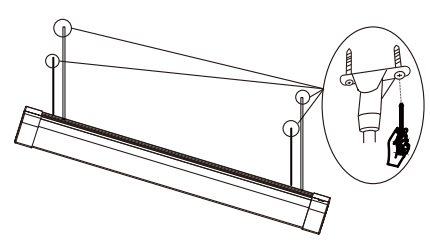


7. Screw brackets to ceiling.

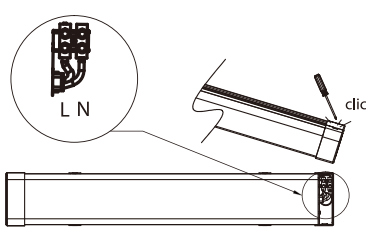

8. Remove end cap and wire as shown.

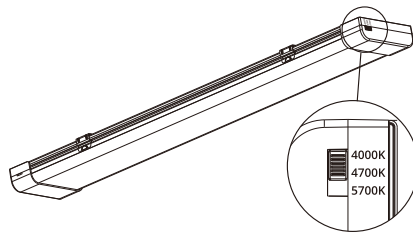

9. Select colour temperature by toggling switch.

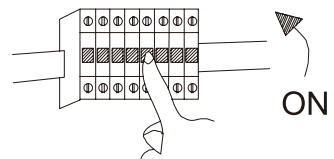

10. Test the installation in accordance with the wiring rules and regulation.
Switch on power.