

# HANECO LED DOWNLIGHT INSTALLATION GUIDE

## CEDAR

Thanks for choosing our CEDAR Downlight products.  
We strongly recommend that you read this manual carefully before installation.

### Do not cover



- Suitable for residential or commercial use in AU. Fitting cannot be covered with building insulation
- Insulation must be placed as per clearance distances according to manufactures installation guide

### WARNING

 
- Installation must be carried out by a licenced electrician and in accordance with these instructions and relevant Australian standards and local regulations.
- Ensure input voltage conforms within product specifications.
- Ensure wires are securely connected.
- Before switching on, ensure all wires are correctly connected.
- The warranty is void if product is not installed according to the instructions.

### Product Specifications

Product Code	Cutout	Adjustable Angle	Dimming Method	IC Rating	IP Rating	Operating Temp
CEDAR-REC-TRI	220 × 130 mm	0-66°	Non-Dimmable	DO NOT COVER	IP40 (From Below)	-20-45°C


### Installation Instructions

**1.**

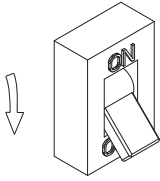


Switch off power.

**2.**

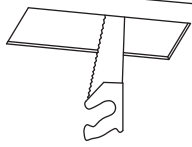 


Cut 220 × 130 mm rectangular hole on the ceiling.

**3.**




Insert driver and cables through the cut-out into the ceiling cavity and plug into a pre-wired socket outlet inside the ceiling.

**4.**




Connect the luminaire to the driver.

**5.**



 
Fold mounting clips up to the sides of the luminaire and insert luminaire through the cut-out.

**6.**



Ensure insulation do not abut and cover the luminaire\*.


**7.**



Switch on power.

#### NOTE

 \* There should be minimum 100mm of free space around and 50mm above the luminaire.

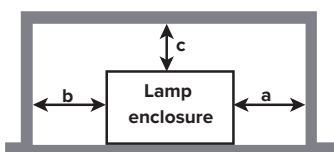

a:100mm,b:100mm,c:50mm

Product code: CEDAR-REC-TR1