HANECO LIGHTING LED INSTALLATION GUIDE


LED YOUR FUTURE

Haneco Lighting LED Downlights require clearance around the heat sink including thermal insulation and building structural components to be at a minimum of 25mm. This clearance is based on a maximum ambient temperature of 70 °c. The electronic LED driver must be located at least 50mm away from the heat sink in a well ventilated area.



Insulation or combustible material must not come in contact with the luminaire or LED unit.

- *Installation Instructions:
- 1. Take LED fitting out of the box.
- 2. Cut a hole as per instruction below.
- 3. Put the plug into the socket.
- 4.Insert LED Downlight into the pre-cut hole while gently releasing mounting springs.

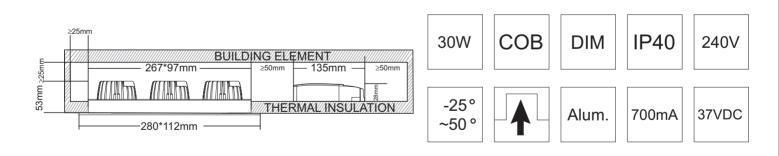

Installation of the product is to be completed by a licensed electrician, in accordance with these instructions and relevant Australia standards/local regulations.

PRODUCT CODE:D30W280*112RE



For more information info@haneco.com.au www.haneco.com.au



