


HANECO LED DOWNLIGHT INSTALLATION GUIDE

DETAIL^{NOVA}

Thanks for choosing our DETAIL NOVA Downlight products.
We strongly recommend that you read this manual carefully before installation.

WARNING

- Installation must be carried out by a licenced electrician and in accordance with these instructions and relevant Australian standards and local regulations.
- Do not install any luminaire near the heat source.
- Before the installation make sure you have turned OFF the electricity supply.
- Ensure the product is connected to a 220-240V AC 50/60Hz power supply.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or by a service agent or licenced electrician in order to avoid hazard.
- Non-user replaceable light source.
- The lens cover of the luminaire is secured by glue, unremovable.
- The warranty is void if product is not installed according to the instructions.
- Risk of overheating of fire if the clearance distances are compromised.

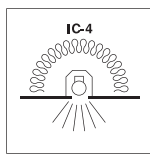


IC-4

Building insulation used to abut and cover the luminaire must meet the following requirements:

- Be of a type that can maintain its dimensions and structural integrity when exposed to the maximum surface temperatures of the class of luminaire, being 90°C and must withstand a 30s needle flame test carried out in accordance with AS/NZS 60695.11.5 with the flame applied to all surfaces of the sample.
- [New Zealand Only] Loose fill insulation as defined in NZS4246 is not permitted to abut or cover this luminaire.


INFO & WARNING	
The minimum clearance distance from the top of the luminaire to any normally flammable building element (mm)	0mm
The minimum clearance distance from the top of the luminaire to any building insulation (mm)	0mm
The minimum clearance distance from the side of the luminaire to any normally flammable building element (mm) ..	0mm
The minimum clearance distance from the side of the luminaire to any normally building insulation (mm)	0mm

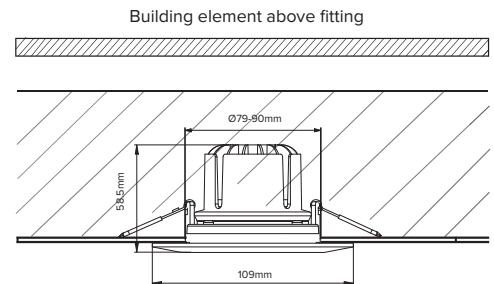


Product Specifications

Product Code	Input	Cutout	Adjustable Angle	Dimming Method	IC Rating	IP Rating	Operating Temp	Maxi Ceiling Thickness
DETAIL-NV9W	220- 240Vac, 50/60Hz	Ø79-90mm	25°	Phase-cut dimmable	IC-4	IP65 Front	-20°C - 45°C	15mm
DETAIL-NV9W-BK	220- 240Vac, 50/60Hz	Ø79-90mm	25°	Phase-cut dimmable	IC-4	IP65 Front	-20°C - 45°C	15mm


Installation Instructions

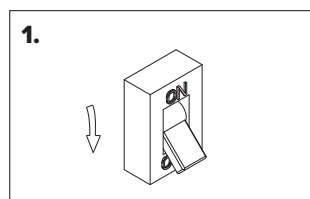


Switch OFF the power.

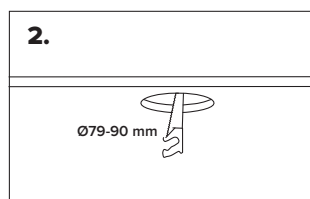


Cut an appropriately sized hole in the ceiling that suits your needs.

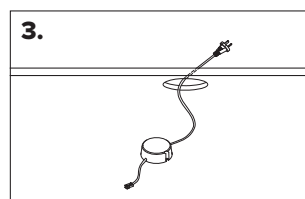


Insert driver and cables through the cut-out into the ceiling cavity and plug into a pre-wired socket outlet inside the ceiling.

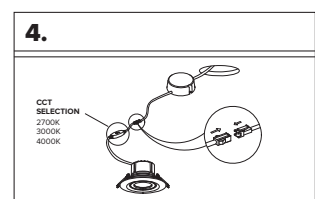


Select the desirable CCT through the switch, then connect the luminaire to the driver.

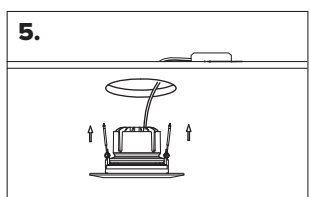

Fold mounting clips up to the sides of the luminaire and insert luminaire through the cut-out.

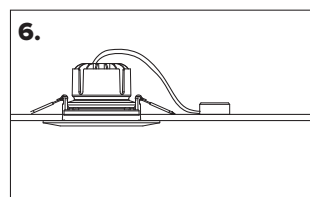

Installing the luminaire in the ceiling.

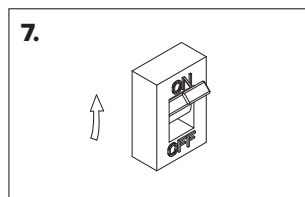

Switch ON power.

Version Updated on:
09/04/2025