HABITAT

Product Code: HABITAT-FL-TRI

This range of Haneco Lighting LED products have been tested as AS/NZS60598.2.2:2001 standards and are approved to the luminaire will not exceed 90°C when side abut or covered with ceiling insulation.

Building insulation is used to abut and cover the luminaire must meet the following requirement:


- 1. Be of a type that can maintain it's dimensions and structural integrity when exposed to the maximum surface temperatures of the class of luminaire, being 90°C and must withstand a 30s needle flame test carried out in accordance with AS/NZS 60695.11.5 with the flame applied to all surfaces of the sample.
- 1. (New Zealand only) Loose fill insulation as defined in NZS4246 is not permitted to abut or cover this luminaire.



Nr.	INFO & WARNING	
а	The minimum clearance distance from the top of luminaire to any normally flammable building element (mm)	0mm
b	The minimum clearance distance from the top of luminaire to any building insulation (mm)	0mm
С	The minimum clearance distance from the side of luminaire to any normally flammable building element (mm)	0mm
d	The minimum clearance distance from the side of luminaire to any building insulation (mm)	0mm

*INSTALLATION:

- 1. Cut 90mm diameter hole.
- 2. Put the plug into the socket.
- 3. Select CCT setting(WW, NW, CW)
- 4. Hold mounting clips up to sides of downlight and insert downlight into cut-out so that springs retract onto rear face of ceiling.

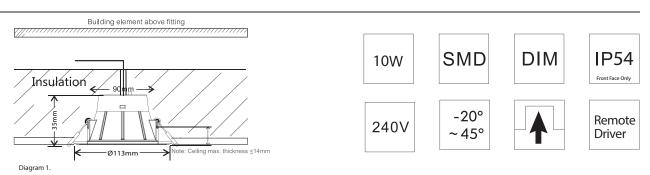

Installation of the product is to be completed by a licensed electrician, in accordance with these instructions and relevant Australian standards and local regulations.

Warning:

- a. Type Y: If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or by a service agent or licenced electrician in order to avoid hazard.
- b. Non-user replacable light source
- c. The lens cover of the luminaire is secured and unremovable

WARNING

The luminaire must be installed by a professional electrician.

Always switch the power off when wiring the luminaire.

Ensure input voltage conforms to the voltage range of product.

Ensure wires are securely connected.

Before switching on, ensure that all the wiring is correct.

Warranty is void if product is not installed according to the instructions.





