 
# **PANORAMA**


Thanks for choosing our PANORAMA LED Security light. We strongly recommend that you read this manual carefully before installation.

# **Installation Instructions**


1 Switch-off main power.




3 Wire the fitting as illustrated below.

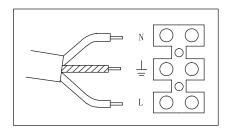


5 Plug and screw the luminaire on the base.

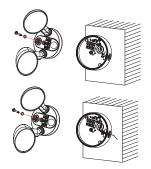


6 Adjust to desired angle.

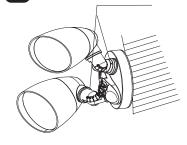


 2 Pull the main through gasket and wiring base




  4 Assemble base to the mounting bracket.








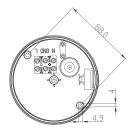

**7** Switch-on main power.

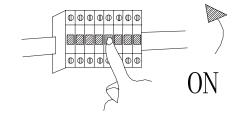








# **PANORAMA**

#### **Sensor Function**

- When the LUX dial is turned to the sun symbol, the light will operate in any light. To have it only operate when it is dark (less than 10 lux), turn the dial to the moon symbol.
- The SENS dial adjusts detection distance. The lowest setting is 1m, which can be increased to 5m by turning the dial to the + symbol.
- The time the light remains on can be adjusted from approximately 2 seconds to approximately 10 minutes.
- Any new movement re-sets the time and delays the moment the light goes off.

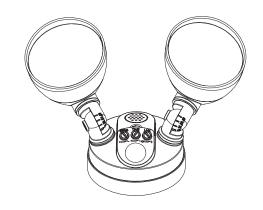

## **Manual Override Function**

The light can stay on for longer time periods by turning the wall switch on and off within three seconds. This overrides the sensor and allows the light to remain on when switched on.

 
To resume sensor mode, switch off, wait 10 seconds and turn the switch back on.




#### **Test**

When testing in daylight, set the TIME dial to 2S and the LUX dial to maximum (the sun symbol). After 30 seconds the sensor should respond to presence and turn on and then off after the set 2 seconds.

To set the sensor for night time during the day, turn the LUX dial to minimum and cover the sensor to simulate darkness.





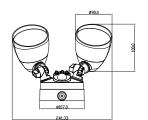







## WARNING

The luminaire must be installed by a professional electrician.

Always switch the power off when wiring the luminaire.

Ensure input voltage conforms to the voltage range of product.

Ensure wires are securely connected.

Before switching on, ensure that all the wiring is correct.

Warranty is void if product is not installed according to the instructions.

Product Code: PANORAMA10W

PANORAMA10WS
PANORAMA10W-WH
PANORAMA10WS-WH
PANORAMA20W
PANORAMA20WS
PANORAMA20W-WH
PANORAMA20WS-WH





