



# **SKYLUX-FG<sup>PRO</sup>**

**FoodGrade Highbay**



*Optional sensor is NOT included*

## **INSTALLATION GUIDE**

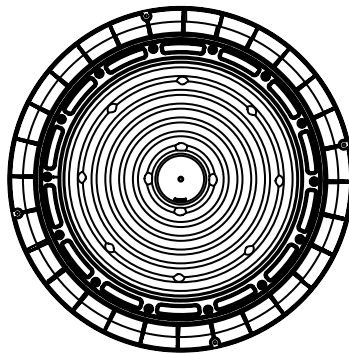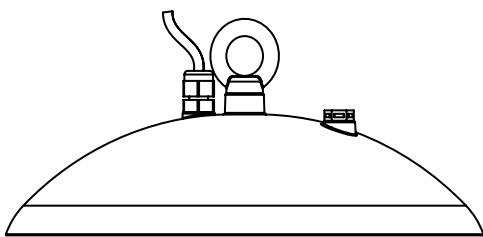


- Please read instruction carefully before assembling and installation
- Please keep instruction as reference in the future

1. Ensure that any installation and maintenance be performed by a qualified electrician and the luminaire is wired in accordance with the local wiring and relevant Australia standards.
2. Ensure that the power supply is off before starting installation and maintenance. Do not switch on until the installation or maintenance is completed.
3. The light source of this luminaire is non-user alternative light source, the light source contained in the luminaire shall only be replaced by the manufacturer of his service agent or a similar qualified person.
4. Make sure the products are grounded.
5. Power supply system should be equipped with SPD (Surge Protection Device) accordance with electrical regulations.
6. The products are suitable for indoor and semi-outdoor use with roof covers. It can be rinsed directly with water.
7. The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 3m is not expected.



PROUCT CODE	SKYLUX FOOD GRADE HIGHBAY PRO	ø (mm)	H (mm)	TRI- Wattage (W)	Weight (kg)	Voltage (v)	Maximum load (kg)	IP	IK	ta
SLFGPS61840120D	SKYLUX FOODGRADE PRO HIGHBAY 60/80/100W 840 120D C/W SEN HACCP	300	127	60W/ 80W/ 100w	2.5	220- 240Vac 50Hz/ 60Hz	10	65	08	-25°C -50°C
SLFGPL61840120D	SKYLUX FOODGRADE PRO HIGHBAY 120/140/160W 840 120D C/W SEN HACCP	345	138	120W/ 140W/ 160W	3.1	220- 240Vac 50Hz/ 60Hz				

## ● INSTALLATION

1. Securely fasten the eyebolt to the body of SKYLUX FG highbay Pro.

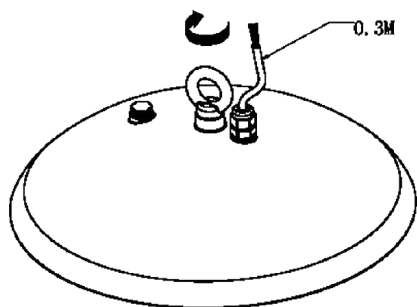

2. To change the wattage settings, loosen the sealing cap using a spanner. Skip this step if you prefer to use the default output.

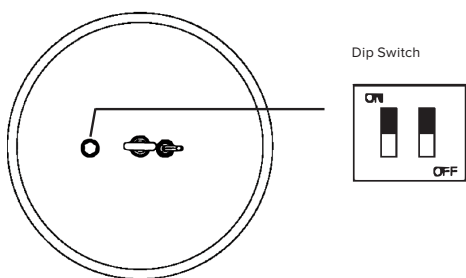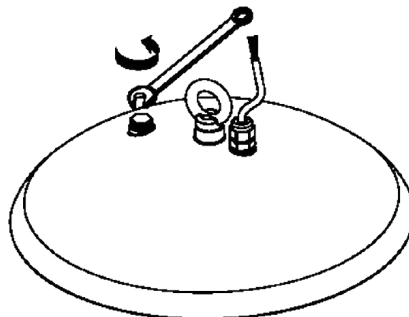


3. Adjust the lighting level to your desired lumen output using the lumen select switches. If you're using the default output, disregard this step.


### Dip Switch Instructions

#### SKYLUX FOODGRADE PRO HIGHBAY 60/80/100W

##### WATTAGE SWITCH SETUP

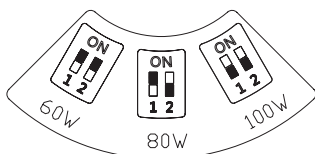


##### WATTAGE +SENSOR SWITCH SETUP

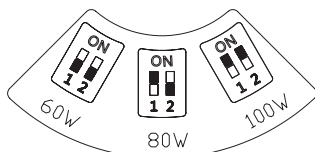


#### SKYLUX FOODGRADE PRO HIGHBAY 120/140/160W


##### WATTAGE SWITCH SETUP

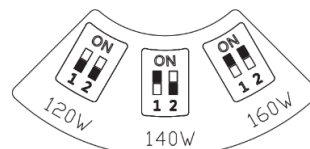


##### WATTAGE +SENSOR SWITCH SETUP

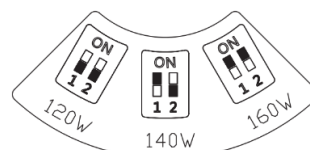


4. Securely tighten the sealing cap using a flat-head screwdriver. Disregard this step if you're using the default output.

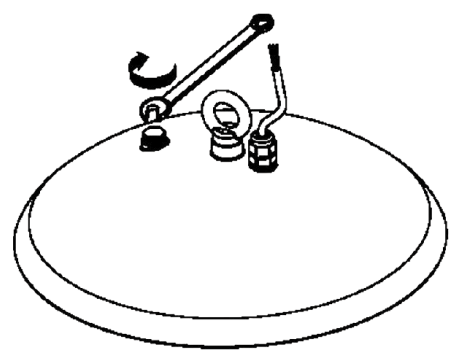

5. Hang the luminaire by the suspension ring, attaching it to a fixed safety hook or closed link chain.

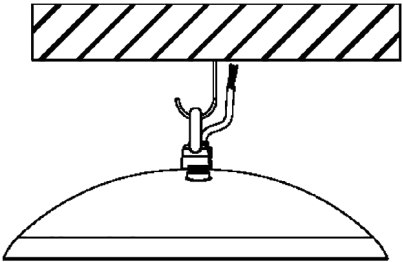

6. Connect the wires as shown in the diagram to activate the light.

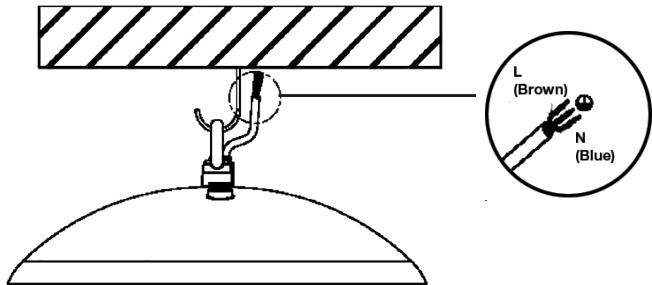

● ACCESSORY (NOT INCLUDED)

PRODUCT CODE	DESCRIPTION
SLFGPSENSOR	SKYLUX FOODGRADE PRO HIGHBAY ZHAGA SENSOR
SLFGPSEN RTE	SKYLUX FOODGRADE PRO HIGHBAY SENSOR REMOTE
SLFGPCRL	SKYLUX FOODGRADE PRO HIGHBAY PC REFLECTOR - UNIVERSAL
SLFGPL60300	SKYLUX FOODGRADE PRO HIGHBAY LENS: 60° (60/80/100W FIXTURE)
SLFGPL60345	SKYLUX FOODGRADE PRO HIGHBAY LENS: 60° (120/140/160W FIXTURE)
SLFGPL90300	SKYLUX FOODGRADE PRO HIGHBAY LENS: 90° (60/80/100W FIXTURE)
SLFGPL90345	SKYLUX FOODGRADE PRO HIGHBAY LENS: 90° (120/140/160W FIXTURE)



SERVICE CONTACT:

HANECO

Haneco Lighting Australia Pty Ltd  
262 Marion Road, Netley, South Australia 5037  
Haneco.com.au  
1300 001 533