HANECO LIGHTING LED DOWNLIGHT INSTALLATION GUIDE

TRIM

Thanks for choosing our TRIM Downlight.

We strongly recommend that you read this manual carefully before installation.

Product Specifications

PRODUCT CODE	POWER	COLOUR TEMPERATURE	VOLTAGE/ FREQUENCY	PF	IP RATING	OPERATING TEMPERATURE
TRIM11W3K50D	11W	3000K 4000K 5700K	220 - 240 V a.c. 50/60Hz	>0.9	IC-4	-20 - 45°C
TRIM11W4K50D	11W					
TRIM11W3K50DWW	11W					
TRIM22W3K50D	2 x 11W				Non-IC	

Installation Instructions

- 1. Cut a hole in the ceiling according to the cut-out size in the above table.
- 2. Insert plug and cable through the cut-out into the ceiling cavity and plug into a pre-wired socket outlet inside the ceiling.
- 3. Fold mounting clips up to the sides of the luminaire and insert luminaire through the cut-out.

 The mounting clips will retract onto the rear face of the ceiling and hold the luminaire in position.
- 4. Insulation of the 22W version cannot abut and cover the luminaire.

WARNING

If the external flexible cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or by a service agent or licenced electrician to avoid a hazard.

Non-user replaceable light source.

The light source contained in this luminaire shall only be replaced by the manufacturer or by a service agent or licenced electrician.

The lens cover is integral to the luminaire and cannot be removed without being permanently damaged.

WARNING

The luminaire must be installed by a professional electrician.

Always switch the power off when wiring the luminaire.

Ensure input voltage conforms to the voltage range of product.

Ensure wires are securely connected.

Before switching on, ensure that all the wiring is correct.

Warranty is void if product is not installed according to the instructions.

Product Code: TRIM11W3K50D

TRIM11W4K50D TRIM11W3K50DWW TRIM22W3K50D





