# HANECO LED BATTEN INSTALLATION GUIDE

# VISTALINE

Thank you for choosing Haneco VistaLINE LED batten.

We strongly recommend that you read this manual carefully before installation.

#### WARNING


- Installation must be carried out by a licenced electrician and in accordance with these instructions and relevant Australian standards and local regulations.
- Ensure input voltage conforms within product specifications.
- Ensure wires are securely connected.
- Before switching on, ensure all wires are correctly connected.
- The warranty is void if product is not installed according to the instructions.


Note: Product technical information and specification may change over time without prior notice. For latest information, please contact our customer service or visit our website www.haneco.com.au


## **Specifications**


Model	Power	Beam Angle	Frequency	IP Rating
VSL20W06-TRI	20W	120°	50/60Hz	IP20
VSL20W06-TRI-EM	20W	120°	50/60Hz	IP20
VSL20W40W12-TRI	20/40W	120°	50/60Hz	IP40
VSL20W40W12-TRI-EM	20/40W	120°	50/60Hz	IP40

### **Installation Instructions**

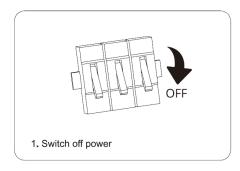


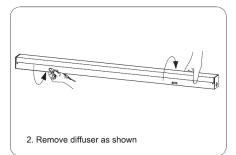


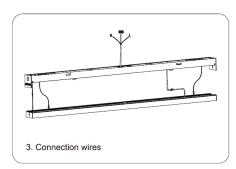

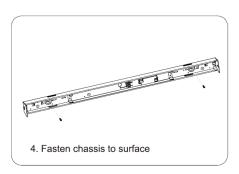



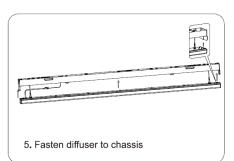

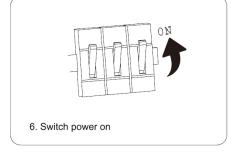

PRODUCT CODE: VSL20W06-TRI

VSL20W06-TRI VSL20W06-TRI-EM VSL20W40W12-TRI VSL20W40W12-TRI-EM





