


# DAWN

## Product Specifications

Product Code	Size	Watt	CCT	Lumen
DN16WOVL-TRI	280x185x100mm	16W	3000K	1320lm
			4000K	1500lm
			5000K	1400lm
DN20WRND-TRI	Ø275x80mm	20W	3000K	1890lm
			4000K	2050lm
			5000K	2050lm
DN30WRND-TRI	Ø350x110mm	30W	3000K	2760lm
			4000K	3000lm
			5000K	2770lm


## Installation Instructions

1. Ensure mains power has been isolated/turned off
2. Drill installation holes in ceilings or walls

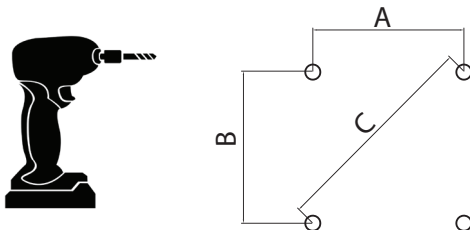


	16W	20W	30W
<b>A</b>	/	142mm	200mm
<b>B</b>	/	142mm	178mm
<b>C</b>	145mm	/	/


3. Remove the top cover, open the PCBA board by twisting the 3 levers and fix the lamp to the ceiling or wall

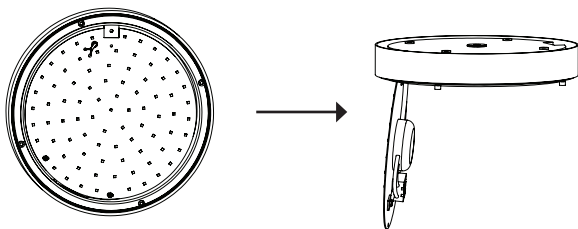

4. According to the size of the power supply line, cut a hole on the gasket and connect the power supply

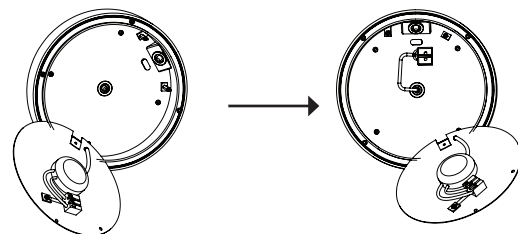

5. Choose your colour temperature and fix the top cover back onto the base

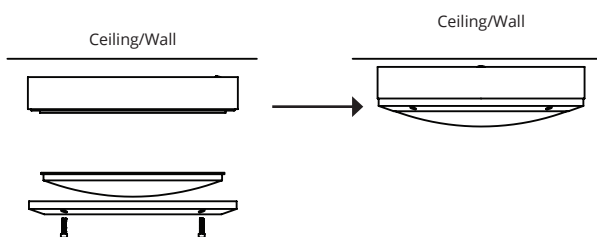

### WARNING

The LED bunker light must be installed by a professional electrician.  
 Switch power off when wiring the LED bunker.  
 Ensure product is installed in a well ventilated area.  
 Ensure input voltage conforms to the voltage range of product.  
 Ensure wires are securely connected.  
 Before switching on, ensure that all the wiring is correct.  
 The warranty is void if product is not installed according to the instructions.

**Product Codes:** DN16WOVL-TRI  
 DN20WRND-TRI  
 DN30WRND-TRI