




Installation Instructions for Straight D Bracket

PARX75W | PARX150W | PARX200W | PARX300W
PARX-ADJ-SQBKT


Steps:

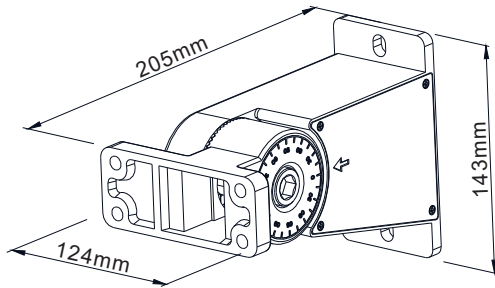


1. Disassemble the bracket D.

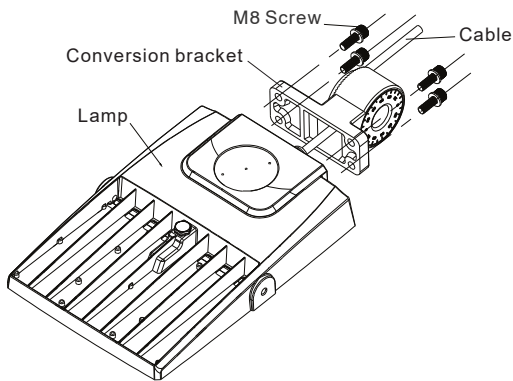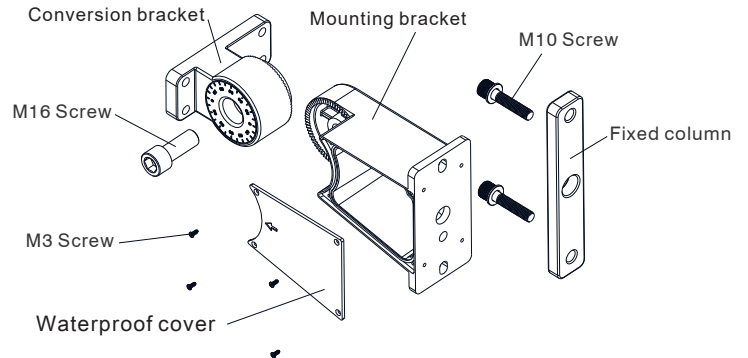


2. The cable passes through the conversion bracket and is fixed conversion bracket to the lamp with M8 screws.

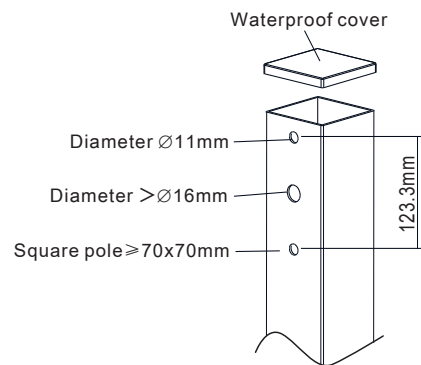

3. Open the waterproof cover of the square pole and confirm the installation hole position on the square pole.

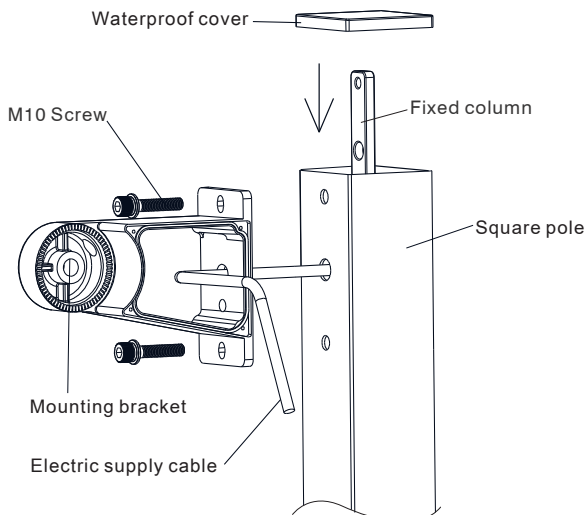

4. The cable passes through the mounting bracket; The mounting bracket is fixed to the pole with M10 screws;

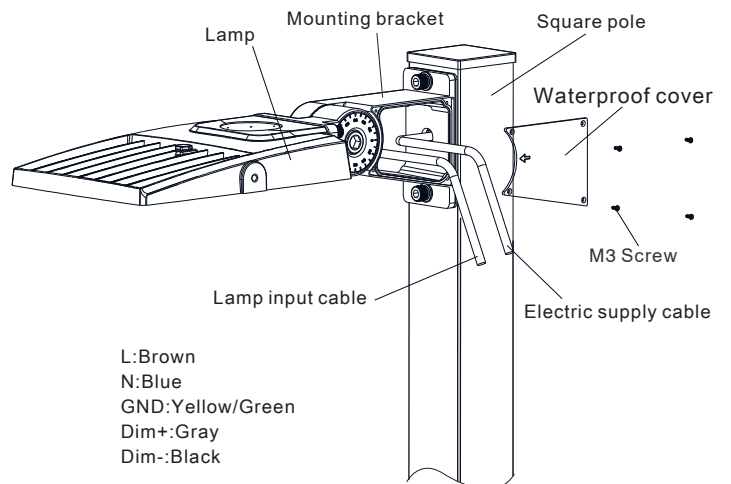

5. The lamp and mounting bracket are reliably fixed, the cable is properly connected and hidden in the mounting bracket cavity. The sealing ring on the bracket cavity, and the waterproof cover is fixed to ensure waterproofing.