

QIKFIT^{G2}

Product Code: **QIKFIT2.0**

Thanks for choosing our QIKFIT 2.0 Surface Socket Quick Connector product.


Please read this installation guide before installation of the product. Failure to do so could result in electric shock, fire or other injuries that could be hazardous or even fatal.

This product has no user serviceable parts. If any part is damaged, disconnect from mains and discontinue use.


Installation of this product is to be completed by a licensed electrician, in accordance with these instructions and relevant Australian standards/local regulations. Due to the nature of the contacts used in this product, both installation and in service continuity testing shall NOT be conducted with a standard instrument probe. A loaded plug or instrument probes that utilise flat pins MUST be used.

Installation Instructions

INLINE CONNECTION

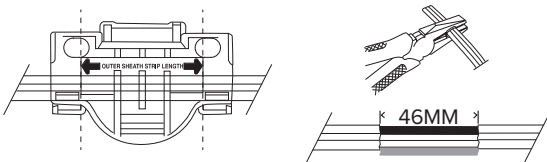


END OF LINE CONNECTION

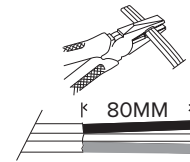


1. Measure and strip the cable 46mm for an inline connection or 80mm for an end of line connection. Conductor Range 1.0mm² to 2.5mm² solid/stranded to AS/NZS5000. DO NOT use for conductors outside this range.


INLINE CONNECTION

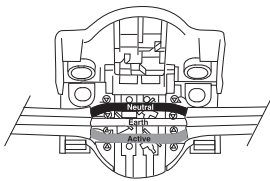


END OF LINE CONNECTION

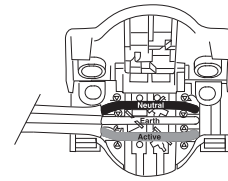

2. Put the cables into the slots according to the indicated colours as shown to ensure correct polarity.
Note: When completing an end of line connection, place tails into individual cavities.

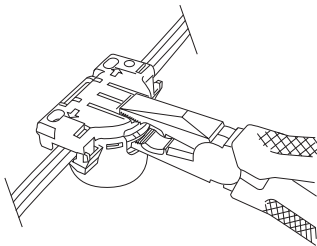

3. Tightly squeeze the cover with pliers as shown until both clips latch.

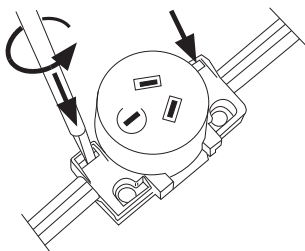

4. If required, re-open by inserting flat blade screwdriver and twist to release both clips.
Note: To ensure adequate connection, do not reinstall in the same position on the cable.