

# HANECO LIGHTING LED INSTALLATION GUIDE

## SQUARE 20X20MM 120°

PRODUCT CODE: PARALLAX20X20SQ1M / PARALLAX20X20SQ2M

Product should be installed by a qualified electrician.


Prior to installation ensure power is off at fuse box to prevent electrical shock.

### Contents




1

Cut to required length  
For best results it is recommended to use a good quality mitre saw with a carbon tipped negative rake blade with 70-100 teeth.  
Always use safety goggles when cutting.

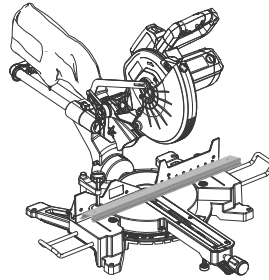


2

Cut LED strip to suit  
Cut down the line of the LED strip in between two rows of solder pads. Always cut line LED from end without connector / wire leads.  
Ensure that the strip fits completely inside the extrusion.

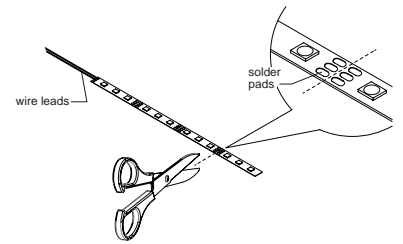


3

Clean inner surface of profile with isopropyl alcohol

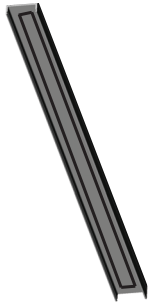


4

Attach LED strip in centre of profile.  
Wire as shown in LED strip instructions.

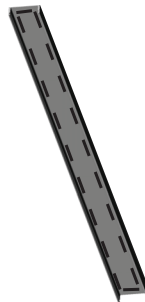


5

Mark and evenly space countersink drill holes on mounting profile.  
Position on structural members where possible.

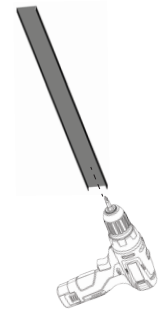


6

Insert profile into mounting profile.  
**WARNING** Profile can only be removed from mounting profile by sliding from one end. Attempting to remove by prying out the strip will damage the base tray\*

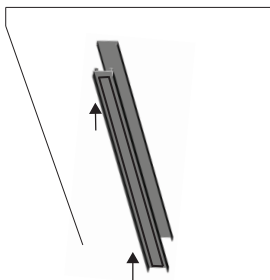

7

Push in diffuser

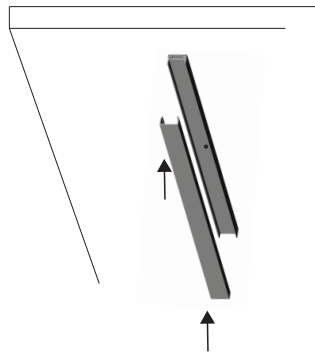

8

Insert end caps

