

# HANECO LIGHTING LED INSTALLATION GUIDE

## CORNER 23X16MM 120° ROUND FACE


PRODUCT CODE: PARALLAXCNR23RD1M / PARALLAXCNR23RD2M

**Product should be installed by a qualified electrician.**

**Prior to installation ensure power is off at fuse box to prevent electrical shock.**


### Contents

Accessories shown as required per 2m install  
(2 clips and 2 screws for 1m)

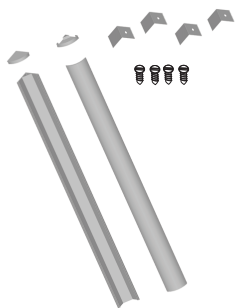


1

Cut to required length  
For best results it is recommended to use a good quality mitre saw with a carbon tipped negative rake blade with 70-100 teeth.  
Always use safety goggles when cutting.

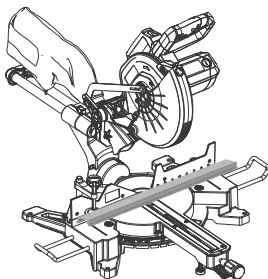


2

Cut LED strip to suit  
Cut down the line of the LED strip in between two rows of solder pads. Always cut from end without connector / wire leads.  
Ensure that the strip fits completely inside the extrusion.

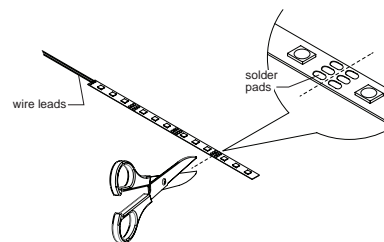


3

Insert end caps

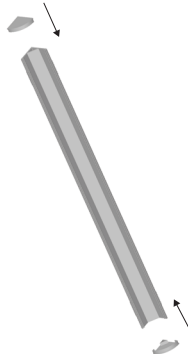

4

Clean inner surface with isopropyl alcohol.

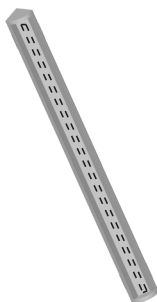

5

Attach LED strip in centre of profile.  
Wire as shown in LED strip instructions.




6

Mark and evenly space countersunk drill holes. Position on structural members where possible.  
Note: It is important to countersink behind mounting brackets to ensure flush mounting of clips and profile.



7

Clip profile to installed clips.

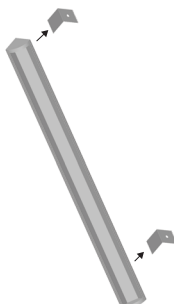

8

Push in diffuser.

