

# HANECO LED DOWNLIGHT INSTALLATION GUIDE

## VIVA<sup>110</sup>


Thanks for choosing our **VIVA<sup>110</sup>** Downlight products.  
We strongly recommend that you read this manual carefully before installation.

### WARNING

- Installation must be carried out by a licenced electrician and in accordance with these instructions and relevant Australian standards and local regulations.
- Do not install any luminaire near any heat source.
- Before the installation make sure you have turned OFF the electricity supply.
- Ensure the product is connected to a 220-240V AC 50/60Hz power supply.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or by a service agent or licenced electrician in order to avoid hazard.
- Non-user replaceable light source.
- The lens cover of the luminaire is secured by glue, unremovable.
- The warranty is void if product is not installed according to the instructions.
- Risk of overheating of fire if the clearance distances are compromised.

### Clearance Guide

This range of Haneco Lighting LED products have been tested to AS/NZS60598.2.2:2016 standards and are approved to the luminaire will not exceed 90°C when side abutted or covered with ceiling insulation.

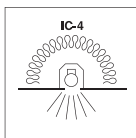


IC-4

**Building insulation used to abut and cover the luminaire must meet the following requirements:**

- Be of a type that can maintain its dimensions and structural integrity when exposed to the maximum surface temperatures of the class of luminaire, being 90°C and must withstand a 30s needle flame test carried out in accordance with AS/NZS 60695.11.5 with the flame applied to all surfaces of the sample.
- [New Zealand Only] Loose fill insulation as defined in NZS4246 is not permitted to abut or cover this luminaire.


INFO & WARNING	
The minimum clearance distance from the top of the luminaire to any normally flammable building element (mm) ....	0mm
The minimum clearance distance from the top of the luminaire to any building insulation (mm) .....	0mm
The minimum clearance distance from the side of the luminaire to any normally flammable building element (mm) ...	0mm
The minimum clearance distance from the side of the luminaire to any normally building insulation (mm) .....	0mm

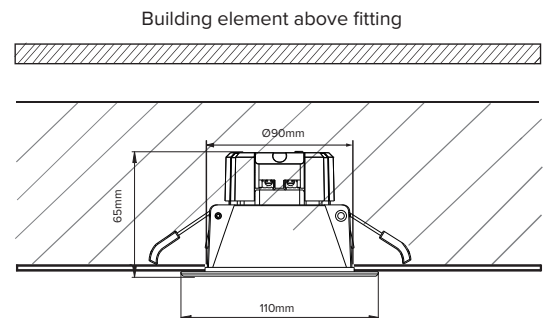


### Product Specifications

Product Code	Input	Cutout	CRI	Dimming Method	IC Rating	IP Rating	Operating Temp	Maxi Ceiling Thickness
VIVA110-MULTI	220- 240Vac, 50/60Hz	Ø90mm	>80	Phase-cut dimmable	IC-4	IP44 Front	-20°C - 45°C	15mm


### Installation Instructions

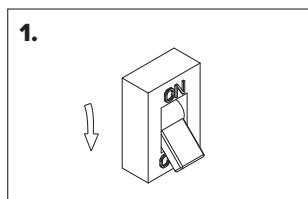


Switch OFF the power.

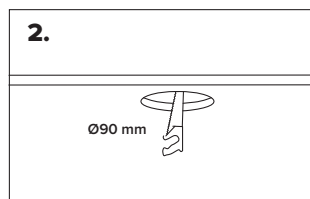


Cut an appropriately sized hole in the ceiling that suits your needs.

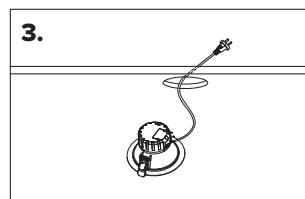


Insert cables through the cut-out into the ceiling cavity and plug into a pre-wired socket outlet inside the ceiling.

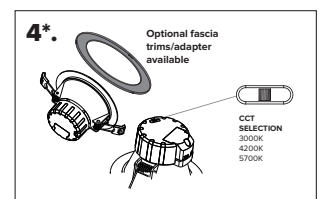


Select the desired CCT using the switch and attach the fascia trim/ trim adapter (optional) with your preferred colour finish.

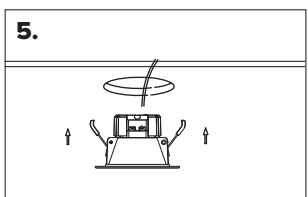

Fold mounting clips up to the sides of the luminaire and insert luminaire through the cut-out.

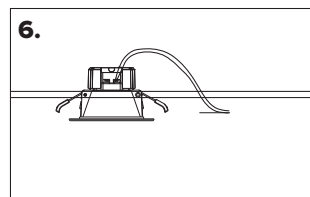

Installing the luminaire in the ceiling.

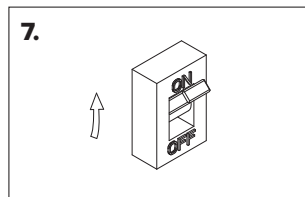

Switch ON power.

\* Refer to the installation guide of mounting support accessories on how to install with the luminaire.

Version Updated on:  
10/04/2025